

PNEUMATRON

www.pneumatron.co.za

sales01@pneumatron.co.za


3/2 Industrial Solenoid Valve

PLT32 Brass Series 3/2 Valves Normally Closed

USE Supply Pressure on PORT 2 - For N/Closed Functioning


USE Supply Pressure on PORT 1 - For Flow Divert to Port 2 or 3

Medium: Air Gas, Water & Light oil ≤ 20 CST
Temperature: VITON: -10°C to 140°C (Standard)
Pressure: See table below
Port Size (BSP): 1/4"
Orifice: 1.5mm, 2mm
Coil voltages: 220VAC, 110VAC, 24VDC, 24VAC, 12VDC - IP65, 100%ED
Material: Brass body with Viton seal

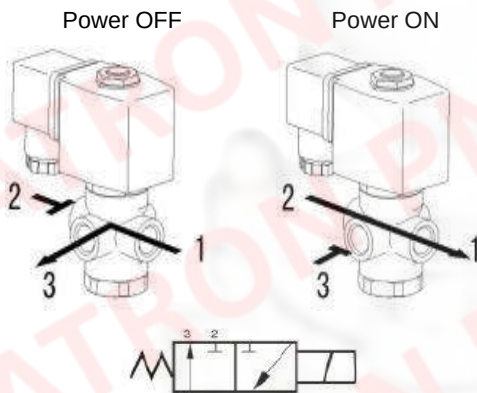

PLT32 Brass Series, Normally Closed with Coil

Port Size	Orifice (mm)	KV	Min Pressure	Max Pressure		Seals Material	Body Material	Valve Body	Coil
				AC(22VA)	DC(13W)				
1/4"	1.5	0.06	0 Bar	13 Bar	11 Bar	VITON	Brass	PLT32BH015S02V	C13
1/4"	2	0.12	0 Bar	8 Bar	8 Bar			PLT32BH02S02V	C13

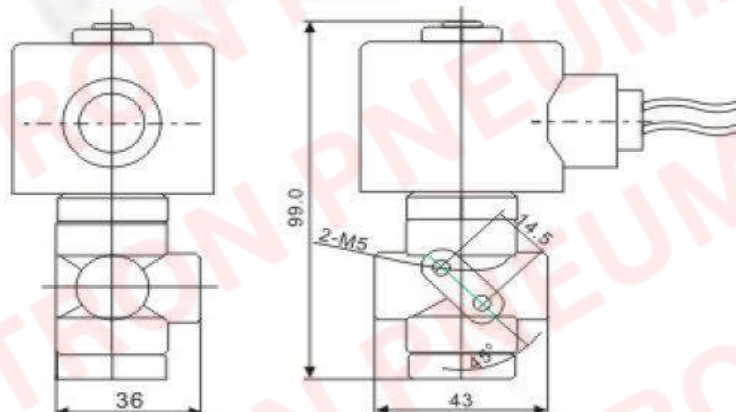

PNEUMATRON

www.pneumatron.co.za


sales01@pneumatron.co.za

3/2 Industrial Solenoid Valve


PLT32 Brass Series 3/2 Valves Normally Closed

DIN Plug Wiring Connections

Wiring Connections **AC**

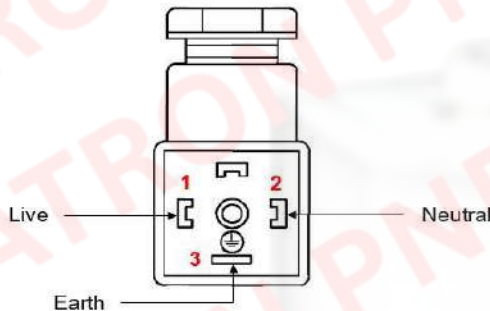

Wiring Connections **DC**

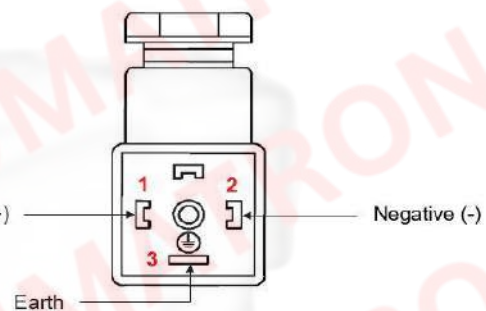

VALVE INSTALLATION INSTRUCTIONS

1. These valves should be installed horizontally with the coil on top for the best and most reliable operation, any other installation method is done at own risk.
2. No installation in direct sunlight. If the solenoid valve is installed in direct sunlight the coil and valve must be shaded - a shading steel plate can be mounted above the valve to protect it from direct sunlight. DO NOT box these valve to block direct sunlight, there will be no ventilation to keep the coil cool unless you mount a fan.
3. Insure that the valve is installed correctly as per the flow direction indicated by an arrow on the valve, in/out wording or as per instruction in the data sheet. Incorrect installation will result in malfunction of the valve and possible damage.
4. Check the valve label for pressure range requirements. Any valve should not be used for higher pressure than what they are rated for.
5. The valve label will indicate the valve body material and the seal material. Never apply incompatible fluids or gasses with the body and seal material.
6. The seal material indicates the temperature range that can be used with the valve. Going beyond the temperature range will cause the valve to malfunction.
7. All valves should be cleaned from time to time. Generally, if the voltage to the coil is correct, sluggish valve operation, excessive noise or leakage will indicate that cleaning is required.