

PNEUMATRON

www.pneumatron.co.za



sales01@pneumatron.co.za

2/2 Industrial Solenoid Valve PLM222 Brass Series, Direct Acting (N.C)

Characteristic:

1. Direct acting miniature construction at low power consumption
2. Compact design to save the space
3. Applied to low pressure system, open from 0 bar


Medium: Air Gas, Water
Temperature: VITON: -10°C to 140°C
Pressure: Orf 1mm: 0 to 20Bar (AC) (See table below)
 Orf 2mm: 0 to 13 Bar (AC) (See table below)
 Orf 2.5mm: 0 to 10 Bar (AC) (See table below)
Body: Brass
Port Size: 1/4"
Orifice (mm): 1mm, 2mm & 2.5mm
Coil voltages: 220VAC, 110VAC, 24VDC, 24VAC, 12VDC
Coils: IP65, 100%ED

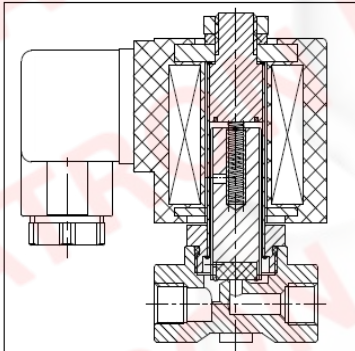

Picture does not show DIN Plug connector, but it is included.

PLM222 Brass Series, Normally Closed with Coil

Port Size	Orifice (mm)	KV	Min Pressure	Max Pressure			Seals Material	Body Material	Valve Body	Coil
				AC (6VA)	DC (D2)(6W)	DC (D9)(12W)				
1/4"	1	0.04	0 Bar	20 Bar	15 Bar	20 Bar	VITON	Brass	PLM222BH01S02V	C1010
1/4"	2	0.11	0 Bar	13 Bar	10 Bar	13 Bar	VITON	Brass	PLM222BH02S02V	C1010
1/4"	2.5	0.15	0 Bar	10 Bar	6 Bar	12 Bar	VITON	Brass	PLM222BH025S02V	C1010

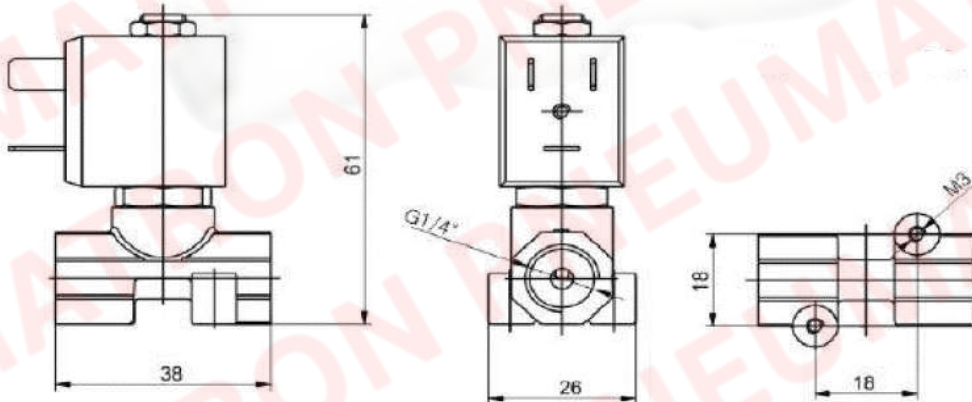


PNEUMATRON

www.pneumatron.co.za

sales01@pneumatron.co.za

2/2 Industrial Solenoid Valve PLM222 Brass Series, Direct Acting (N.C)

DIN Plug Wiring Connections

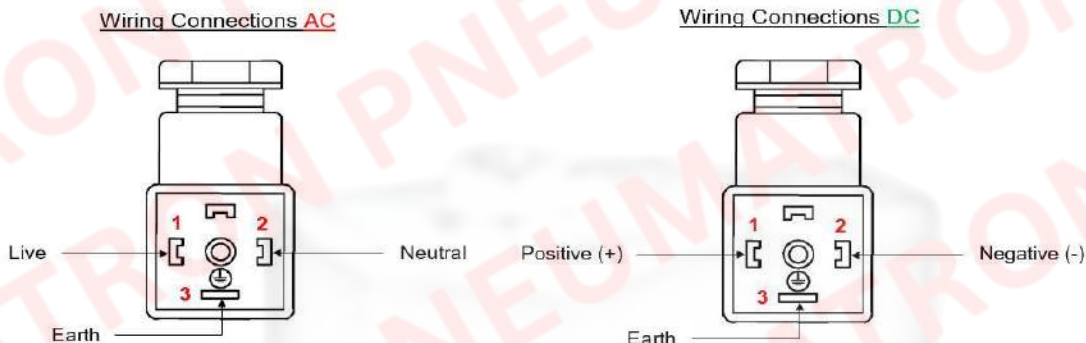

VALVE INSTALLATION INSTRUCTIONS

1. These valves should be installed horizontally with the coil on top for the best and most reliable operation, any other installation method is done at own risk.
2. No installation in direct sunlight. If the solenoid valve is installed in direct sunlight the coil and valve must be shaded - a shading steel plate can be mounted above the valve to protect it from direct sunlight. DO NOT box these valve to block direct sunlight, there will be no ventilation to keep the coil cool unless you mount a fan.
3. Insure that the valve is installed correctly as per the flow direction indicated by an arrow on the valve, in/out wording or as per instruction in the data sheet. Incorrect installation will result in malfunction of the valve and possible damage.
4. Check the valve label for pressure range requirements. Any valve should not be used for higher pressure than what they are rated for.
5. The valve label will indicate the valve body material and the seal material. Never apply incompatible fluids or gasses with the body and seal material.
6. The seal material indicates the temperature range that can be used with the valve. Going beyond the temperature range will cause the valve to malfunction.
7. All valves should be cleaned from time to time. Generally, if the voltage to the coil is correct, sluggish valve operation, excessive noise or leakage will indicate that cleaning is required.